

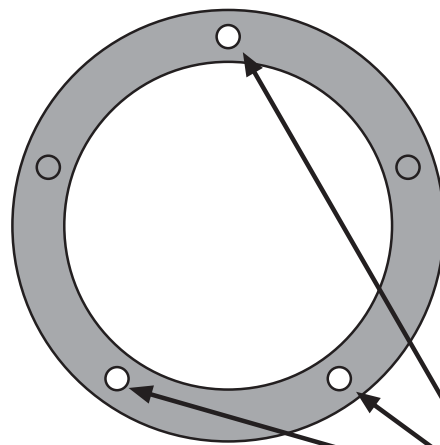
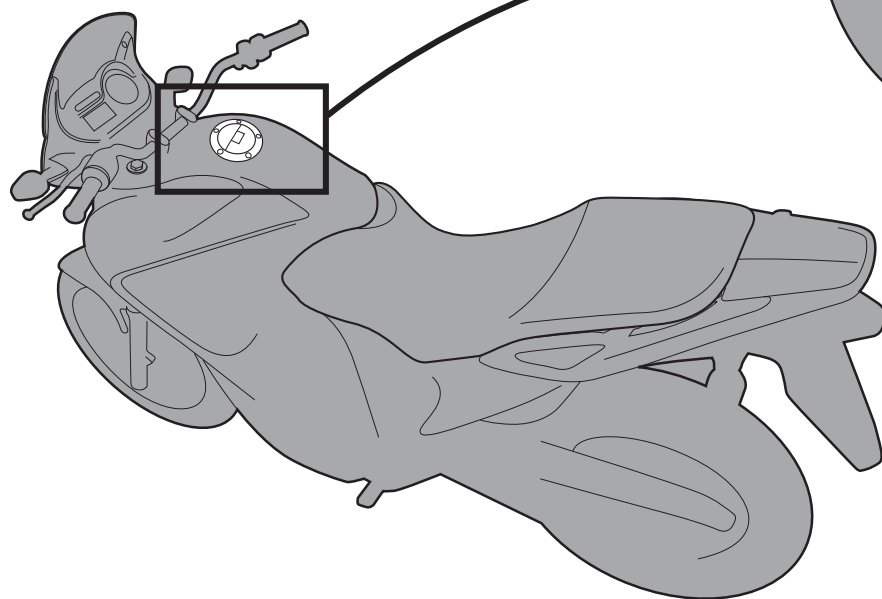


BFO4K

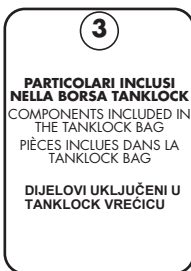

Rimuovere le viti originali
Remove the original screws
Enlevez les vis originales

Uklonite originalne vijke

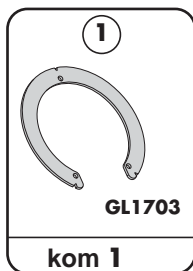